

Mikrotik Stup

Hosting Internal server

IP > Firewall > NAT : We can specify our own server for external access.

- 8181 - This is to MAC mini server Time log and mSupply registration page.
- 5900 -- This is to MAC mini screenshare
- 9100 -- This is to the label printer 192.168.3.246 for Moneyworks staff to do some label printing

NAT list

#	Action	Chain	Src. Address	Dest. Address	Prot...	Src. Port	Dest. Port	Any. Port	In. Interf...	Out. Interf...	In. Interf...	Out. Interf...	Src. Address List	Dest. Address List	Bytes	Packets
1	+* dst-nat	dstnat			6 (tcp)		8181		ether1						3645.1 KiB	63 356
2	+* dst-nat	dstnat			6 (tcp)		5900		ether1						49.9 MiB	875 359
3	+* dst-nat	dstnat			6 (tcp)		9100		ether1						172.3 KiB	3 172
4	+* dst-nat	dstnat			6 (tcp)		3905		ether1						0 B	0
5	+* dst-nat	dstnat			6 (tcp)		8282		ether1						0 B	0
6	+* dst-nat	dstnat			6 (tcp)		3900		ether1						374.9 KiB	8 967

Setting for port 8181

RouterOS v6.48 (stable)

Quick Set WebFig Terminal

NAT Rule <>

OK Cancel Apply Remove Reset Counters

Not enabled

Enabled ☒

Chain: dstnat

Src. Address: *

Dest. Address: *

Protocol: 6 (tcp)

Src. Port: *

Dest. Port: 8181

Any. Port: *

In. Interface: ether1

Out. Interface: *

In. Interface List: *

Out. Interface List: *

Packet Mark: *

Connection Mark: *


Routing Mark: *

Routing Table: *

Connection Type: *

General

Advanced

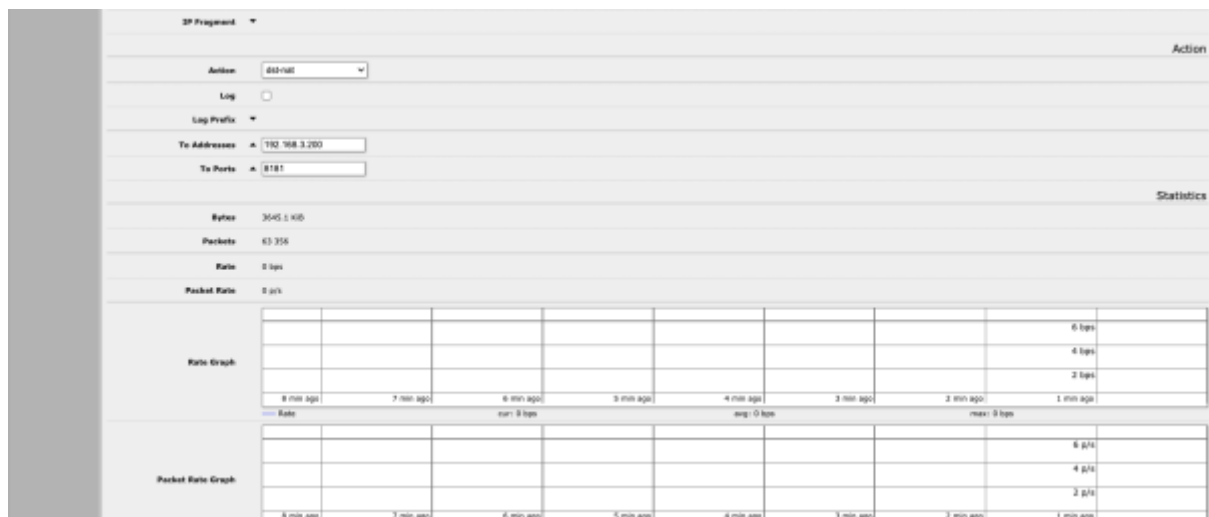

Domain re-direct

IP > DNS > Static button

- We can re-point ktm.msupply.org to our mac mini server : 192.168.3.200

DHCP Server

- IP > DHCP Server > Lease : We can lease IP address to a hardware

From:
<https://wiki.sussol.net/> - Sussol Internal Wiki

Permanent link:
https://wiki.sussol.net/doku.php/misc:hardware:sussol_hardware:mikrotik:hosting_internal_servers?rev=1742350623

Last update: 2025/03/19 02:17

